

Index

• A •

- A (aperture-priority) autoexposure mode.
See aperture-priority (A) autoexposure mode
- A/V jacks, 23–24
- Accessory terminal, 23
- Active D-Lighting, 227–229
- Adjust playback volume, 114
- Adjustments panel, ViewNX 2, 176–177
- Adobe Photoshop, 161
- Adobe Photoshop Elements, 159–160
- Adobe RGB color mode, 274–276
- Advance frame by frame, 114
- Advanced Operation screen, 87–88
- Advanced Shooting menu, 75
- AE Lock, Shutter button, 337–338
- AE-L/AF-L button (autoexposure lock)
 - autofocus lock, 253–254
 - customizing functions, 336–337
 - setting, 225–226
- AF-A (auto-servo autofocus), 251
- AF-area mode, 98–101, 219, 246–250
- AF-assist lamp, 18–19, 49
- AF-C (continuous-servo autofocus), 251
- AF-F (full-time servo autofocus), 98–99
- AF-I (autofocus) lens, 8–9
- AF-S (autofocus) lens, 8–9
- AF-S (single-servo autofocus), 98, 251
- aperture ring, lens attachment setting, 9
- aperture-priority (A) autoexposure mode
 - aperture adjustments, 213
 - depth of field control, 261–262
 - Exposure Compensation button, 17–18
 - flash settings, 53
 - level of control, 209
 - scenic vistas, 295
 - semi-automatic exposure mode, 47
 - shutter speed adjustments, 213
- apertures. *See also* f-stops
 - adjustments, 212–214
 - depth of field effects, 201
 - exposure factor, 198–199
 - f-stop numbers, 198–199
 - maximum depth of field, 259–261
 - shallow depth of field, 259–261
- Apple Aperture, image organizer, 161
- Apple iPhoto, 159
- Apple Photoshop Lightroom, 161
- artifacts, image quality, 56–57
- aspect ratios, printing, 183–184
- audio, 20–23, 40
- Auto Area, 219, 248
- Auto Distortion control, 74, 257
- Auto Flash Off mode, 42, 75–78
- Auto, fully automatic exposure mode, 42
- Auto Image Rotation, 38
- Auto Info Display, 36
- Auto ISO, exposure modes, 216
- Auto mode, 52, 75–78, 239, 277
- Auto No Flash mode, 277
- Auto Off Timers
 - exposure meter timing, 211
 - instant review settings, 124
 - Live View shutdown timer, 93–94
 - playback timing settings, 122–123
 - Setup menu control, 39
- Auto/Manual focus switch, 11, 73, 244
- autoexposure lock (AE-L), 20–21, 111
- autoexposure lock (AE-L/AF-L), 225–226
- autofocus lock (AF-L) button, 20–21
- Autofocus
 - AF-area mode, 246–250
 - AF-S (autofocus-silent wave), 10
 - Auto/Manual focus switch, 73, 244
 - autofocus lock, 253
 - autofocus lock (AF-L) button, 20–21
 - Child mode, 81
 - Close Up mode, 85
 - focus mode settings, 251–253
 - focus points, 245
 - Landscape mode, 82
 - Portrait mode, 81
 - Sports mode, 83–84
 - subject targeting, 245–246

autofocus-silent wave (AF-S) Nikon technology, 10–11
 automatic picture rotation, 124–126

• B •

Back symbol, 28
 backgrounds, 87–89, 262, 288
 backlight scenes, 303
 back-of-the-body controls, 19–22
 backups, long term image storage, 166
 barrel distortion, 322–324, 257
 batteries, 25, 33, 39–40, 95, 163
 Battery Status indicator, 25, 32, 33
 Beep, Setup menu control, 40
 beeps, 49–50
 Before and After image comparisons, 309–310
 bit depth, color values, 65
 bits, 178
 black-and-white images, 277, 319–320
 blown highlights, 138–141
 bracketing exposures, 298–299
 Brightness histogram, 138–139
 buffers, 49, 51
 built-in flash. *See also* flash
 enabling/disabling, 230–231
 Flash/Flash compensation button, 22
 manually setting, 241
 supported exposure modes, 52–53
 bulb exposure, 199
 burst mode. *See* Continuous, Shutter button
 buttons, Function (Fn) button settings, 41
 Buttons, Setup menu control, 41

• C •

Calendar view, image display, 130–131
 calibration utility, 184–185
 camera body, lens mount cover, 8, 10
 camera shake, 12–13, 95
 caps, 8, 10
 Capture NX 2, 124
 card stock, White Balance setting, 271–272
 Cars (Freeze Motion), 88
 CD-Rs, long term image storage, 166
 Center-weighted metering mode, 219–221
 channels, bit depths, 65

Child mode
 flash limitations, 52
 shutter speed synchronization, 239
 Standard (SD) Picture Control, 277
 when to use, 80–81
 Classic, information display format, 36–37
 Clean Image Sensor, 37
 clipped highlights, 138–139
 Close Up mode
 flash limitations, 52
 focus points, 245
 shallow depth of field, 262
 Single Point AF, 247
 Standard (SD) Picture Control, 277
 shutter speed synchronization, 239
 when to use, 84–85
 close up shots
 depth of field, 299
 diopters, 300
 flash, 300
 flowers, 300
 lens focusing distance, 299
 macro lens, 300
 nature scenes, 300
 outdoor lighting, 300
 shot composition, 299–300
 zooming in, 299
 color adjustment filters, 158–159
 Color Balance tool, 317–318
 color casts, 56–57
 color information, 137–140
 Color intensifiers, 316–317
 color management programs, 186
 color outlines, 340–341
 color saturation
 Landscape mode, 82
 RGB histogram, 139–140
 Vivid (VI) Picture Control, 277
 Color Space, 74
 color spaces, ViewNX 2, 179
 color temperature, Kelvin scale, 264
 color values, 65
 colorimeters, 185
 colors
 Color Balance tool, 317–318
 Color intensifiers, 316–317
 color spaces, 274–276
 digital lens filters, 315–317
 fill flash issues, 233

- Filter Effects adjustments, 316–317
 - Picture Controls, 276–281
 - Skylight filter, 316–317
 - Warm filter, 316–317
 - white balancing, 265–274
 - Command dial
 - Active D-Lighting, 229
 - aperture/shutter speed, 213–214
 - back-of-the-body control, 19–20
 - exposure value (EV), 222–223
 - Flash Compensation, 240
 - Flash mode selections, 231
 - ISO adjustments, 215
 - White Balance, 268
 - comments
 - annotating images, 38, 329–330
 - Shooting Data display mode, 142
 - compressed air, cleaning, 70
 - compression ratios, 63–64
 - computers, USB port connections, 23–24
 - connection ports, 23–24, 154–155, 162, 164
 - Continuous, Shutter button, 19, 48–49, 73
 - continuous-servo autofocus (AF-C), 251
 - contrast
 - Landscape mode, 82
 - Quick Retouch filter, 313–315
 - Vivid (VI) Picture Control, 277
 - controls
 - Adjust playback volume, 114
 - Advance frame by frame, 114
 - AF-assist lamp, 18–19
 - aperture ring, 9
 - Auto/Manual focus switch, 11
 - autoexposure lock (AE-L) button, 20–21
 - autofocus lock (AF-L) button, 20–21
 - back-of-the-body, 19–22
 - Command dial, 19–20
 - Delete button, 20–21
 - eCheat Sheet, 4
 - Exposure Compensation button, 17–18
 - Fast forward/rewind, 114
 - Flash, 22
 - Flash compensation, 22
 - Flash hot shoe, 18–19
 - front-left, 22–23
 - Function (Fn) button, 22
 - Help button, 20–21
 - hidden connections, 23–24
 - Info button, 18
 - Information Edit button, 20, 22
 - Lens switches, 22–23
 - Lens-release, 9, 10, 22
 - Live View switch, 19–20
 - manual focusing ring, 10–11
 - memory card access light, 15
 - memory card lock switch, 16
 - Microphone, 22–23
 - Mode dial, 18–19
 - mounting index button, 9, 10
 - movie playback, 113–117
 - Movie-record button, 20
 - Multi Selector, 20–21
 - multi-tasking conventions, 17
 - OK button, 20–21
 - On/Off switch, 17
 - Pause/resume playback, 114
 - Playback button, 20–21
 - Release mode switch, 18–19
 - shutter button, 17
 - slide show playback, 152
 - Speaker, 20, 22
 - Stop playback, 114
 - Thumbnail button, 20–21
 - topside, 17–19
 - tripod socket, 24
 - Vibration Reduction (VR) switch, 12–13
 - viewfinder adjustment dial, 13–14
 - Zoom In button, 20–21
 - Zoom Out button, 20–21
 - convergence, Perspective Control, 324–326
 - Convert Files dialog box, 177–179, 189–190
 - covers, viewfinder, 93
 - crop factor, focal lengths, 263
 - cropping images, Trim function, 327–328
 - Cross Screen filter, 338–340
 - CSC code, edited files, 309
 - cyanotypes, Retouch menu, 319–320
- D •
- Date Imprint, Setup menu control, 41
 - Date, Setup menu control, 38
 - dates
 - camera/computer synchronization, 171
 - Date control settings, 38
 - deleting selected photos, 147–148

dates (*continued*)

- File Information mode, 136
- picture imprinting, 41
- Delete button, 20–21, 145
- Delete menu, 145–149
- Demo pictures, 41
- depth of field
 - aperture effects, 201
 - aperture-priority autoexposure (A) mode, 261–262
 - background blurring, 262
 - camera-to-subject distance, 259
 - Close Up mode, 84
 - close-up shots, 299
 - focus factor, 79
 - f-stops, 258
 - Landscape mode, 82
 - lens focal length, 258–259
 - maximum settings, 259–261
 - Portrait mode, 262
 - shallow settings, 259–261
- difficult-to-focus subjects, 102
- diffusers, still portraits, 291
- digital lens filters, 315–317
- Digital Print Order Format (DPOF), 187
- Digital Vari-Program modes. *See* Mode dial
- dim lighting, AF-assist lamp, 19
- diopter adjustment control, 13–14
- diopters, close-up shots, 300
- direct measurement, 271–272
- dirt, image quality defect, 56–57
- Display Calibrator Assistant, 185
- Display Color Calibration, 185
- Distortion Control filter, 323–324
- D-Lighting filter, Retouch menu, 312–313
- D-Lighting, Function (Fn) button, 335
- double backup, image storage, 166
- Dust Off Ref Photo, Setup menu, 39
- dust reduction system, lens attachment, 9
- dust-removal filter, 39
- DVDs, long term image storage, 166
- Dynamic Area, AF-area mode, 247–248



- [-E-] symbol, memory card uninstalled, 15
- Easy Operation menu, 26–27
- eCheat Sheet, camera controls, 4
- EG-D2 Audio Video Cable, 23–24

- 18-55mm AF-S Vibration Reduction (VR)
 - zoom lens, 9. *See also* kit lens

- e-mail, photo preparations, 187–194

- environmental conditions, 9

- Exit symbol, menu navigation, 28

- Exposure Compensation

- aperture adjustments, 214

- applying, 221–225

- exposure modes, 224–225

- exposure value (EV), 222–224

- Guide mode access, 222

- Live View recordings, 111

- topside controls, 17–18

- value scale, 222

- exposure filters, ViewNX 2, 158–159

- exposure meter

- Auto Off Timers, 39–40

- settings, 209–211

- single point AF selection, 250

- exposure modes

- aperture/shutter speed, 213–214

- Auto Area AF, 248

- Auto ISO, 216–217

- built-in flash, 52–53

- enabling/disabling flash, 230–231

- Exposure Compensation, 224–225

- Flash/Flash compensation button, 22

- focus mode selections, 252

- fully automatic modes, 46–47

- guided menu screen display, 25–26

- ISO adjustments, 215–216

- Picture Controls, 277–278

- rangefinder settings, 40

- Rear-Curtain Sync mode, 235–237

- semi-automatic modes, 47–48

- shutter speed synchronization, 239

- Slow-Sync flash, 235–237

- exposure value (EV) scale, 222

- exposures

- Active D-Lighting, 227–229

- AE-L/AF-L button (autoexposure lock), 225–226

- aperture element, 198–199, 201

- aperture-priority autoexposure (A), 209

- Exposure Compensation, 221–225

- exposure meter, 209–211

- image capture guidelines, 208

- ISO element, 200, 204–206

- Live View recordings, 111

- manual (M), 209
 - metering modes, 218–221
 - programmed autoexposure (P), 209
 - RGB Histogram mode, 137–140
 - shutter speeds, 199, 202–204
 - shutter-priority autoexposure (S), 209
 - side effects, 200–206
 - external flash
 - hot shoe attachment point, 18–19, 51–52
 - rotating head, 290
 - still portraits, 290
 - external hard drives, 166
 - Eye-Fi memory cards
 - downloading images to a computer, 162–163
 - file uploads, 42
 - wireless network memory card, 14
 - Eye-Fi Upload, Setup menu control, 42
 - eyesight compensation, 13–14
- **F** ●
- Face Priority, 100, 103
 - faces, picture-in-picture thumbnails, 132
 - Fast forward/rewind, 114
 - file formats, 61–67
 - File Information mode, 135–137
 - File Number Sequence, 40–41
 - file size, 59–60
 - Filenames, 135–136
 - files, 40–42, 166
 - Fill flash mode, 232–234
 - filters
 - Color Balance tool, 317–318
 - Color intensifiers, 316–317
 - Cross Screen, 338–340
 - Distortion Control, 323–324
 - D-Lighting, 312–313
 - dust-removal, 39
 - Fisheye, 323–324
 - neutral density, 297
 - Noise Reduction, 218
 - Perspective Control, 324–326
 - Quick Retouch, 313–315
 - Red-Eye Correction, 311–312
 - Skylight, 316–317
 - Soften, 341–342
 - ViewNX 2, 158–159
 - Warm, 316–317
 - fireworks, shot composition, 301–302
 - Firmware Version, 3, 42
 - Fisheye filter, 323–324
 - flash. *See also* built-in flash
 - Child mode, 81
 - Close Up mode, 85
 - close-up shots, 300
 - disabled in Continuous mode, 49
 - exposure modes, 230–231
 - Fill flash mode, 232–234
 - Flash Compensation, 237–240
 - Flash mode selections, 231–237
 - front-left buttons, 22
 - Landscape mode, 82–83
 - manually setting, 241
 - Portrait mode, 81
 - Rear-Curtain Sync mode, 235–237
 - Red-eye reduction mode, 234–235
 - Slow-Sync flash mode, 235–237
 - Sports mode, 84
 - still portraits, 288–291
 - supported exposure modes, 52–53
 - Flash button, 74, 230–231
 - Flash Compensation, 22, 237–240
 - flash diffuser, still portraits, 291
 - flash drives, 166
 - Flash hot shoe, 18–19
 - Flash modes, 53–55, 73–75
 - flicker reduction, 95
 - Flicker Reduction, Setup menu control, 38
 - flowers, close-up shots, 300
 - fluorescent lighting, 94–95
 - focal lengths, 12, 263, 258–259
 - focal plane position mark, 254
 - focus
 - Auto/Manual focus switch, 73
 - Autofocus, 244–253
 - depth of field, 79
 - Guide mode settings, 87
 - locking at a specific distance, 253–254
 - manually focusing, 254–257
 - shutter speeds, 79
 - softening, 341–342
 - focus modes
 - AF-A (auto-servo autofocus), 251
 - AF-C (continuous-servo autofocus), 251
 - AF-F (full-time servo autofocus), 98–99
 - AF-S (autofocus-silent wave), 10–11

focus modes (*continued*)

- AF-S (single-servo autofocus), 98, 251
- Live View, 98–99
- manual focusing ring, 10–11
- MF (manual focus), 99, 251–252
- switching in the Quick Settings screen, 99

Focus Point button, ViewNX 2, 158–159

focus points

- Close Up mode, 245
- framing a picture, 245
- manually focusing, 255
- single point AF selection, 250
- Sports mode, 245
- viewfinder, 13–14
- ViewNX 2, 158–159

focus switch, manually focusing, 254–255

focusing frame, 102–105

focusing pairs, 102

focusing, Live View recordings, 111

Folder Name, 135

folders

- creating custom storage folders, 332–334
- custom image folders, 332–334
- image storage, 42
- image view selections, 126–127
- Nikon Transfer 2, selections, 169–170

force flash, Fill flash mode, 232–234

foreign languages, 38

Format Memory Card command, 15

Format Memory Card, Setup menu, 36

formatting, 148–150

Frame Number, 135

frame numbers, 141–142

frame rates, 109–111

frames, 115–117

frames-per-second, 49

Framing Grid mode, Live View, 96–97

framing, still portraits, 291

Freeze Motion (Cars), 88

Freeze Motion (People), 88

front-left controls, Nikon D3100, 22–23

f-stops. *See also* apertures

- aperture numbers, 198–199
- Command dial settings, 19–20
- depth of field control, 258
- kit lens, 199
- scenic vistas, 295–296
- Shooting Info display, 212

Function (Fn) button

- Active D-Lighting, 229
 - behaviors, 334–335
 - control settings, 41
 - front-left buttons, 22
 - image quality/size, 69
 - ISO adjustments, 215
 - White Balance, 268
- functions, menu selections, 30–31



GP-1 unit, Accessory terminal connection point, 23

GPS (Global Positioning System), 42

GPS unit, 23

Graphic, information display, 36–37

grayscale images, 277

Guide mode

- background settings, 87–89
- Exposure Compensation access, 222
- flash settings, 53
- motion blurs, 88
- motion freeze settings, 88
- picture taking process, 87–90

Guide setting, Mode dial, 24, 25

guided menu screens, 25–28



handholding, shutter speed, 203

hard drives, 166

HDMI CEC TV, photo viewing, 153

HDMI jacks, 23–24

HDMI, Setup menu control, 38

HDTV playback, photo viewing, 153

heat levels, Live View shutdown, 94

Help button, 20–21

Help symbol, 28

Help system, 21, 28, 34–35

hidden connections, 23–24

Hide Indicators mode, 96

highlights, 138–139, 227–229

Highlights display mode, 140–141

histograms, 137–140

horizon lines, straightening, 320–322

hot shoe, 18–18, 51–52

Huey Pro, monitor calibration, 185

1

ICC Color Profiles, Nikon Transfer 2, 171
 ICC profiles, 179
 Image Comment, 38, 329–330
 image folders, creating, 332–334
 Image Overlay, 309, 344–348
 Image Quality settings
 default pros/cons, 55–56
 default settings, 74
 file formats, 61–67
 File Information mode, 136
 image defects, 56–57
 RAW, 66
 RAW+JPEG, 66–67
 Shooting Information screen display, 68
 Image Quality/Size, 335
 image selections, Nikon Transfer 2, 169
 image sensors, cleaning guidelines, 70
 Image Size settings
 default settings, 74
 e-mail photo preparations, 189–190
 File Information mode, 136
 file size, 59–60
 print size, 59
 recommendations, 60–61
 resolution values, 58–59
 screen display size, 59
 Shooting Information screen display, 68
 image stabilization. *See* Vibration
 Reduction (VR) control
 image transfers
 camera-to-computer connections, 162–164
 Nikon Transfer 2, 167–172
 operating system variations, 164–165
 ViewNX 2, 167–172
 images. *See also* pictures
 bit depth, 65
 Calendar view, 130–131
 Continuous mode storage, 49, 51
 deleting all photos, 145–146
 movie frames, 116–117
 multiple image viewing, 128–130
 one-at-a-time deletion, 145
 playback mode display adjustments, 21
 quality defects, 56–57
 quality/size adjustments, 68–70
 size considerations, 58–61
 storage folder settings, 42

 tagging for deletion, 146–149
 text comments, 38
 viewing in Playback mode, 126–133
 Zoom In button, 131–133
 Zoom Out button, 130–131
 zooming in/out, 21
 indoor lighting, 300
 Info button, 18, 31–32
 Info Display Format, 36
 Info Edit button, 32–34
 Information Edit button, 20, 22
 ink cartridges, 185–186
 instant review, disabling, 124
 ISO
 Auto ISO, 216–217
 dampening noise, 218
 exposure factor, 200
 exposure mode adjustments, 215–216
 Function (Fn) button assignment, 335
 image noise, 204–206
 sensitivity settings, 216–217
 value displays, 217
 ISO Sensitivity setting, 22
 ISO values, 142

2

jacks, camera-to-television, 23–24
 JPEG artifacts, 56–57
 JPEG Basic, 63
 JPEG file format
 compression ratios, 63–64
 date imprinting, 41
 e-mail photo preparations, 189–190
 lossy compression, 63, 64
 Retouch menu default, 309
 JPEG Fine, 63, 67
 JPEG Normal, 63

K

Kelvin scale, color temperature, 264
 keystoneing, Perspective Control filter, 324–326
 kit lens
 Auto/Manual focus switch, 244
 disabling Vibration Reduction (VR), 13
 18-55mm AF-S Vibration Reduction (VR)
 zoom lens, 9
 f-stop range, 199

kit lens (*continued*)

- Lens switches, 22–23
- manual focusing ring, 10–11
- zoom barrel, 11, 12

• L •

Landscape (LS), Picture Control, 278

Landscape mode

- flash disabled, 52
- Landscape (LS) Picture Control, 287
- large depth of field, 262
- when to use, 82

landscape orientation, 125

Language, Setup menu control, 38

large depth of field, apertures, 259–262

Large, image resolution value, 58–59, 60

LCD Brightness, 36

lens dirt, image quality defect, 56–57

lens distortion, Retouch menu, 322–324

lens focal length, 258–259

lens mount cover, 8, 10

Lens switches, front-left buttons, 22–23

lenses

- AF-S/AF-I (autofocus) specifications, 8
- Auto/Manual focus switch, 244
- camera attachment, 8–9
- cleaning guidelines, 70
- environmental condition concerns, 9
- focal length characteristics, 263
- f-stop range, 198–199
- kit lens, 9

lens-release button, 9, 10, 22

manual focusing ring, 10–11

mounting index button, 9, 10

protective cap, 8, 10

removal, 10

Vibration Reduction (VR), 12–13

zoom barrel, 11, 12

lens-release button, lens attachment, 9, 10

Lens-release, front-left buttons, 22

light sensitivity, 200

lighting

Active D-Lighting, 227–229

AF-assist lamp, 19

close-up shots, 300

Live View damage concerns, 94–95

little white dot. *See* mounting index button

Live View

AF-area mode, 98, 99–101

battery consumption, 95

camera setting adjustment, 92

camera shake, 95

enabling/disabling, 19–20

exiting, 92

flicker reduction, 95

Focus modes, 98–99

focusing frame, 102–105

focusing pairs, 102

Framing Grid mode, 96–97

heat level issues, 94

Hide Indicators mode, 96

lighting concerns, 94–95

manual focus, 105

monitor shutdown timer, 93–94

MOV format, 112

movie settings, 109–113

noise defects, 94

selecting, 92

Show Indicators mode, 96

starting/stopping recordings, 112–113

still pictures, 106–109

viewfinder guidelines, 93

Live View switch, 19–20, 92

lock switch control, 16

long lenses, focal length, 263

lossy compression, JPEG format, 63, 64

LZW compression, 178

• M •

M (manual) mode

aperture adjustments, 214

bulb exposure, 199

Exposure Compensation button, 18

exposure mode, 47

flash settings, 53

level of control, 209

Live View, 105

shutter speed adjustments, 214

Mac Finder, image file transfers, 165

Mac OS X (10.4.11, 10.5.8 or 10.6.4), 163, 185

macro lenses, 300

magic hours, 298

magnifications, image display, 132–133

- manual focus (MF)
 - camera settings, 254–257
 - Live View focus mode, 99
 - when to use, 251–252
- manual focusing ring, 10–11
- Matrix metering mode, 219–221
- media players, 166
- Medium, image resolution value, 58–59, 60
- megapixels (MP), 58
- memory buffer, 49, 51
- memory card access light, 15
- memory card reader, 162
- memory cards
 - deleting photos, 144–149
 - enabling/disabling temporary pictures, 41
 - Eye-Fi SD, 14
 - Eye-Fi uploads, 42
 - failure concerns, 17
 - formatting, 15, 36
 - formatting versus deleting images, 148
 - handling procedures, 16
 - inserting, removing, 14–15
 - locking/unlocking, 16
 - long term image storage issues, 166
 - one-at-a-time image deletion, 145
 - protected status pictures, 149–150
 - SDHC (Secure Digital High Capacity), 14
 - SDXC (Secure Digital eXtended Capacity), 14
 - shots remaining display, 51
 - Shots remaining information, 25–26
 - speed classes, 16
- Menu button
 - guided menus, 25–29
 - menu access control, 20–21
 - Mode dial settings, 24
 - regular menu access, 29
 - Setup menu access, 35
- menus
 - Back symbol, 28
 - Battery status display, 25
 - Easy Operation selections, 26–27
 - Exit symbol, 28
 - exiting, 28
 - Exposure mode display, 25–26
 - function selections, 30–31
 - guided menu navigation, 25–28
 - guided versus regular, 28–29
 - Help symbol, 28
 - Live View adjustments, 92
 - Menu button access control, 20–21
 - Multi-Selector/OK button navigation control, 21, 26–28
 - question mark (?) display, 34–35
 - recently accessed items, 31
 - restoring default settings, 36, 42–43
 - Shoot selections, 26–27
 - Shots remaining display, 25–26
 - switching between, 30
 - View/Delete selections, 26
- mercury-vapor lights, flicker reduction, 94–95
- metadata
 - image comments, 331–332
 - Nikon Transfer 2, 171
 - picture imprinting, 41
 - ViewNX 2, 179
- Metadata panel, ViewNX 2, 158–159
- metering modes, selecting, 218–221
- MF (manual focus)
 - camera settings, 254–257
 - Live View focus mode, 99
 - when to use, 251–252
- Microphone, front-left buttons, 22–23
- microphones, Live View recordings, 111
- midtones, Brightness histogram, 138–139
- Miniature Effect tool, 343–344
- Mirror lock-up, 37
- Mode Dial
 - aperture-priority autoexposure (A) mode, 209
 - fully automatic exposure modes, 46–47
 - Guide setting, 24, 25
 - manual (M) exposure mode, 47
 - manual (M) mode, 209
 - programmed autoexposure (P) mode, 209
 - regular menu access, 29
 - semi-automatic exposure modes, 47–48
 - Setup menu access, 35
 - shutter-priority autoexposure (S) mode, 209
 - topside controls, 18–19
- monitor
 - Auto Off Timers, 39–40
 - brightness controls, 36
 - display formats, 36–37
 - flicker reduction, 38
 - Live View shutdown timer, 93–94
 - printer calibration, 184–185
 - temporary picture display, 41

- Monochrome (MC), 277–278
- monochrome photos, 319–320
- motion blurs
 - Show Water Flowing, 88
 - shutter speeds, 202–204, 247
- mounting index button, 9, 10
- MOV format, Live View movies, 112
- Movie-record button, 20
- movies
 - frame trimming, 115–116
 - Live View settings, 109–113
 - Live View switch, 19–20
 - MOV format, 112
 - Movie-record button, 20
 - Multi Selector playback controls, 113–117
 - Retouch menu controls, 115–116
 - saving a frame as a still image, 116–117
- moving car windows, 301
- moving subjects
 - AF-C (continuous-servo autofocus), 251
 - AF-C focus mode, 253
 - autofocus targeting, 246
 - Dynamic Area AF, 253
 - Live View focusing pairs, 102
 - shot composition, 292–295
- Multi Selector
 - back-of-the-body control, 20–21
 - guided menu navigation, 26–28
 - movie playback controls, 113–114
 - picture-in-picture thumbnail navigation, 132
 - Quick Settings screen adjustments, 34
 - regular menu navigation, 30–31



- nature scenes, close-up shots, 300
- Neutral (NL), Picture Control, 277–278
- neutral density filter, 297
- Night Portrait mode
 - flash limitations, 52
 - Portrait (PT) Picture Control, 278
 - when to use, 85–86
- nighttime city shots, 298
- Nighttime Portrait mode, 239
- Nikon Capture NX 2
 - automatic dust-removal filter, 39
 - image browser/organizer, 160–161

- Raw (NEF) file processing, 172
- Raw file conversion, 65
- Nikon EG-D2 Audio Video Cable, 23–24
- Nikon Electronic Format (NEF) file format, 62
- Nikon MC-DC2 remote shutter release
 - cable, 23
- Nikon Transfer 2
 - camera date/time synchronization, 171
 - deleting original files after transfers, 171
 - ICC Color Profiles, 171
 - image selections, 169
 - image transfers, 167–172
 - photo viewer settings, 171
 - preference settings, 170–172
 - renaming photos when downloading, 170
 - shutting down after file transfers, 171
 - storage folder selections, 169–170
 - subfolder selections, 170
 - thumbnail views, 168
 - XMP/IPTC data, 171
- Nikon UC-E4 USB cable, 23–24, 162
- Nikon ViewNX 2
 - automatic image orientation, 38, 124
 - e-mail photo preparations, 189–190
 - image comments, 38, 331–332
 - image quality diagnostic tool, 57
 - image transfers, 167–172
 - Nikon Transfer 2, 167–172
 - organizer/viewer program, 158–159
 - Raw (NEF) files processing, 65, 172, 176–180
 - removing photo protections, 149
 - version number display, 167
- No Flash mode, 52
- noise
 - dampening, 218
 - image quality defect, 56–57
 - ISO effects, 204–206
 - Live View issues, 94
- Noise Reduction, 74
- Noise Reduction filter, 218
- Normal Area, 100, 102
- NTSC, video mode setting, 38, 153–154



- OK button, 20–21, 34
- On/Off switch, 17
- online services, 166

online sharing, 187–194
 operating systems, 163
 optical stabilization. *See* Vibration
 Reduction (VR) control
 orientation, 38, 124–126
 outdoor lighting, close-up shots, 300
 overexposures, 210
 Overview Data mode, 142–144

• p •

P (programmed autoexposure) mode. *See*
 programmed autoexposure (P) mode
 PAL, mode setting, 38, 153–154
 papers, 186
 Pause/resume playback, 114
 People (Freeze Motion), 88
 Perspective Control filter, 324–326
 photo editors, 158–161, 277
 Photo Information modes
 File Information mode, 135–137
 Highlights display mode, 140–141
 Overview Data mode, 142–144
 RGB Histogram mode, 137–140
 Shooting Data display mode, 141–142
 photo organizers, 158–161
 photo paper, troubleshooting, 186
 photo printers, 187
 photo viewers, 158–161
 photo-download wizards, 165
 photos. *See also* pictures
 e-mail preparations, 187–194
 in-camera resizing, 190–194
 long term storage issues, 166
 online sharing, 187–194
 print troubleshooting, 185–186
 renaming when downloading, 170
 viewing on a television, 153–155
 PictBridge, 187
 Picture Controls, 111–112, 276–281
 picture element. *See* pixels
 pictures. *See also* images; photos
 automatic orientation control, 38
 automatic rotation, 124–126
 color outlines, 340–341
 cropping, 326–328
 date imprinting, 41
 deleting photos, 144–149

 disabling instant review, 124
 file naming conventions, 40–41
 focus point framing, 245
 image overlays, 344–348
 image review period, 123
 miniature effects, 343–344
 Photo Information modes, 133–144
 playback timing settings, 122–123
 Protect Status display, 136
 protecting, 149–150
 Quick Settings screen settings, 33–34
 Retouch Indicator, 136–137
 Shooting Information screen settings,
 31–32
 slide shows, 150–152
 starburst effects, 338–340
 temporary, 41
 White Balance matching, 273–274
 pincushion distortion, 257, 322–324
 pixelation, image quality defect, 56–57
 pixels, 58–61, 187–189
 Playback button, 20–21, 113–115
 Playback menu, 125–126, 150–152
 playback mode, 20–21, 124–134
 portable storage devices, 166
 Portrait (PT), Picture Control, 277–278
 Portrait mode
 flash limitations, 52
 Portrait (PT) Picture Control, 278
 shallow depth of field, 262
 shutter speed synchronization, 239
 when to use, 80–81
 portrait orientation, 125
 portraits, 285–291. *See also* still portraits
 ports, 23–24, 154–155, 162, 164
 print size, 59
 printer profiles, 186
 printing, 180–187
 programmed autoexposure (P) mode
 aperture adjustments, 213
 Exposure Compensation button, 17–18
 flash settings, 53
 level of control, 209
 shutter speed adjustments, 213
 semi-automatic exposure mode, 47
 proportions, printing suggestions, 183–184
 Protect Status, image display, 136
 protected status, pictures, 149–150



quality

- e-mail photo preparations, 189–190
- File Information mode, 136
- Live View recordings, 109–111
- question mark (?), 34–35
- Quick Retouch filter, 313–315
- Quick Settings screen
 - Active D-Lighting, 228
 - AF-area mode settings, 248–249
 - AF-area mode switching, 101
 - exposure value (EV) display, 224
 - Flash Compensation adjustments, 240
 - Flash mode selections, 231–232
 - focus mode settings, 252
 - Focus mode switching, 99
 - image quality/size adjustments, 68–69
 - Info button, 18
 - Info Edit button, 33–34
 - ISO adjustments, 215
 - Live View adjustments, 92
 - metering mode selections, 220
 - Picture Controls, 277
 - picture settings display, 32
 - switching between Flash modes, 54–55
 - White Balance adjustments, 267
- Quiet Shutter, 19, 50, 73



- rangefinder, manual focusing aid, 255–256
- Rangefinder, Setup menu control, 40
- RAW, Image Quality settings, 66
- Raw (NEF) file format
 - conversion tools, 66
 - file size considerations, 66
 - Image Overlay, 309, 346–348
 - versus JPEG Fine, 67
- Large image resolution value, 59
- Retouch menu processing, 172–175
- ViewNX 2 processing, 172, 176–180
- Raw file converters, 158–161
- RAW+JPEG, Image Quality, 66–67
- Rear-Curtain Sync mode, 235–237
- Recent Settings menu, 31
- recordings, 109–113

- Red-Eye Correction filter, 311–312
- red-eye reduction
 - AF-assist lamp, 19
 - Retouch menu, 310–312
 - Slow-Sync flash mode, 237
 - solutions, 234–235
 - still portraits, 289
 - ViewNX 2, 158–159
- reference cards, 271–272
- reference photos, 273–274
- reflective surfaces, shot composition, 302
- regular (standard definition) video
 - playback, 153
- Release mode switch, 18–19
- Release modes, 48–50, 73
- remote shutter release cable, 23
- resampling, images before printing, 181
- Reset Setup Options, 36
- resolutions, 58–61, 180–182
- Retouch Indicator, 136–137
- Retouch menu
 - access methods, 308
 - Before and After comparisons, 309–310
 - Color Balance tool, 317–318
 - Color intensifiers filter, 316–317
 - Color Outline, 340–341
 - correction application limitations, 309
 - Distortion Control filter, 323–324
 - distortion controls, 257
 - D-Lighting filter, 312–313
 - e-mail photo preparations, 190–194
 - file numbering system, 309
 - filename conventions, 309
 - Filter Effects adjustments, 316–317
 - Fisheye filter, 323–324
 - focus softening, 341–342
 - image application methods, 308
 - Image Overlay, 309, 344–348
 - JPEG file format, 309
 - lens distortion, 322–324
 - Miniature Effect tool, 343–344
 - monochrome effects, 319–320
 - movie editing, 115–116
 - original image remains intact, 308
 - Perspective Control filter, 324–326
 - Quick Retouch filter, 313–315
 - Raw (NEF) file processing, 172, 173–175
 - Red-Eye Correction filter, 311–312

- red-eye removal, 310–312
 - resizing images, 190–194
 - Skylight filter, 316–317
 - Straighten tool, 321–322
 - Trim function, 327–328
 - Warm filter, 316–317
 - RGB Histogram mode, 137–140
 - RGB histogram, 139–140
 - room lighting, still portraits, 289
 - rotating flash head, 290
 - rotation, 124–126
- S •
- S (shutter-priority) autoexposure mode.
 - See* shutter-priority (S) autoexposure mode
 - saturation
 - Quick Retouch filter, 313–315
 - RGB histogram, 139–140
 - Vivid (V) Picture Control, 277
 - Scene modes, 42, 74, 80–86
 - scenic vistas, 295–299
 - screen display size, 59
 - screen grabs, 116–117
 - SDHC (Secure Digital High Capacity), 14
 - SDXC (Secure Digital eXtended Capacity), 14
 - Secure Digital (SD) memory cards. *See* memory cards
 - Self-Timer, 19, 49–50, 73
 - Self-Timer Delay, 39
 - Self-Timer Release mode, 39
 - sensor dirt, 56–57
 - sensors, cleaning, 37, 70
 - sepia tones, 319–320
 - Setup menu
 - AE-L/AF-L button functions, 336
 - Auto Image Rotation, 38
 - Auto Info Display, 36
 - Auto Off Timers, 39, 93–94, 211
 - automatic picture rotation, 125–126
 - Beep, 40
 - Buttons, 41
 - category selections, 26
 - Clean Image Sensor, 37
 - creating storage folders, 332–334
 - Date, 38
 - Date Imprint, 41
 - Dust Off Ref Photo, 39
 - Eye-Fi Upload, 42
 - File Number Sequence, 40–41
 - Firmware Version, 42
 - Flicker Reduction, 38, 94–95
 - Format Memory Card, 36
 - Format Memory Card command, 15
 - GPS (Global Positioning System), 42
 - HDMI, 38
 - Image Comment, 38, 329–330
 - Info Display Format, 36
 - Language, 38
 - LCD Brightness, 36
 - Mirror lock-up, 37
 - Noise Reduction filter, 218
 - playback timing settings, 122–123
 - Rangefinder, 40
 - rangefinder enabling, 256
 - Reset Setup Options, 36
 - restoring default settings, 36, 42–43
 - Self-Timer Delay, 39
 - Slot Empty Release Lock, 41
 - Storage Folder, 42
 - Time Zone, 38
 - Video Mode, 38
 - shadows
 - Active D-Lighting, 227–229
 - Brightness histogram, 138–139
 - D-Lighting filter, 312–313
 - Quick Retouch filter, 313–315
 - still portraits, 290–291
 - shallow depth of field, 259–262
 - sharpening, 276–277
 - Shoot menu, category selections, 26–27
 - Shooting Data display mode, 141–142
 - Shooting Data Pages, 141–142
 - Shooting Information screen
 - active AF point display, 246
 - AF-area mode settings, 248–249
 - Battery Status indicator, 32, 33
 - blinking question mark (?) character, 35
 - display formats, 36–37
 - exposure meter, 209–211
 - exposure value (EV) display, 222–223
 - Flash Compensation, 239–240
 - Flash mode display, 54
 - f-stop display, 212
 - Image Quality settings display, 68

Shooting Information screen (*continued*)

- Image Size settings display, 68
- Info button, 18
- ISO value display, 217
- memory card installation message, 15
- Picture Controls display, 276
- picture settings display, 31–32
- shots remaining, 32, 33
- shutter speed display, 212
- White Balance display, 266

Shooting menu

- Active D-Lighting, 229
- AF-area mode settings, 249–250
- AF-area mode switching, 101
- Auto Distortion control, 257
- Built-in Flash settings, 241
- Center-weighted metering mode, 219–221
- color space selections, 276
- disabling AF-assist lamp, 19
- image quality/size adjustments, 68–69
- ISO adjustments, 216
- Matrix metering mode, 219–221
- Picture Control adjustments, 279–281
- Picture Controls, 277
- restoring default settings, 42–43
- Spot metering mode, 219–221
- White Balance adjustments, 268–270

shooting speeds, image size settings, 61

shooting through glass, 301

shot composition

- all-purpose settings, 284
- backlight scenes, 303
- close-ups, 299–300
- fireworks, 301–302
- moving car windows, 301
- moving subjects, 292–295
- reflective surfaces, 302
- scenic vistas, 295–299
- shooting through glass, 301
- still portraits, 285–288

shot framing, manually focusing, 255

shots remaining, 25–26, 32, 33

Show Indicators mode, 96

Show Water Flowing, 88

shutdown timer, 93–94

Shutter button

- AE Lock, 337–338
- autofocus targeting, 245–246

- manually focusing, 255
- release modes, 48–50, 72–73
- Shooting Information screen display, 32
- topside controls, 17

shutter release cable, 23

shutter speeds

- adjustments, 212–214
- bulb exposure, 199
- close-up shots, 300
- exposure factor, 199
- fill flash, 233–234
- flash timing synchronization, 239
- focus factor, 79
- handholding the camera, 203
- misty waterfall shots, 296–297
- motion blurs, 202–204, 247
- Shooting Info display, 212
- Sports mode, 83

shutter-priority autoexposure (S) mode

- aperture adjustments, 213
- Exposure Compensation button, 17–18
- level of control, 209
- shutter speed adjustments 213
- flash settings, 53
- semi-automatic exposure mode, 47

shutters, 18–19

Single Frame, 18, 48, 73

Single Point, AF-area mode, 247

single-servo autofocus (AF-S), 251

skin tones, 277–278

Skylight filter, Retouch menu, 316–317

slide shows, 151–152

Slot Empty Release Lock, 41

Slow-Sync flash mode, 235–237, 289–290

Small, image resolution value, 58–59

Soften filter, Retouch menu, 341–342

sound enabled movies, 102

sounds

- camera beeps, 40
- Live View recordings, 111
- Microphone, 22–23
- Quiet mode, 50
- speaker, 20, 22

Speaker, 20, 22

speed classes, memory cards, 16

Sports mode

- Dynamic Area AF, 247–248
- flash disabled, 52

focus points, 245
 Standard (SD) Picture Control, 277
 when to use, 83–84
 Spot metering mode, 219–221
 Spyder3Express, 185
 sRGB color mode, 274–276
 SSC code, edited files, 309
 Standard (SD), Picture Control, 277–278
 standard definition video playback, 153
 starburst effects, 338–340
 stationary subjects, 102, 245–246, 251–252
 still pictures, Live View, 106–109
 still portraits. *See also* portraits
 backgrounds, 288
 external flash, 290
 flash diffuser, 291
 flash techniques, 288–291
 red-eye reduction, 289
 room lighting, 289
 shadow reduction, 290–291
 shot composition, 285–288
 Slow-Sync mode, 289–290
 subject framing, 291
 white balance, 288
 Stop playback, movie, 114
 Storage Folder, Setup menu control, 42
 storage folders, creating, 332–334
 Straighten tool, 321–322
 strobe. *See* flash
 subject framing, still portraits, 291
 Subject Tracking, 100, 103
 sunlight, 94, 95
 sunrise, 298
 sunset, 298

• T •

telephoto lenses, 257, 263
 televisions
 HDMI and A/V jack connections, 23–24, 153–154
 HDMI CEC TV, 153
 HDTV playback, 153
 regular (standard definition) video playback, 153
 video mode settings, 38, 153–154
 viewing photos, 153–155
 temperatures, 94

temporary pictures, 41
 text comments, 38
 3D Tracking, AF-area mode, 248
 Thumbnail button, 20–21
 Thumbnail Grid view mode, 158
 thumbnails, 128–132, 168
 time intervals
 Auto Off Timers, 39–40
 instant review settings, 124
 Live View shutdown timer, 93–94
 Playback mode settings, 122–123
 Self-Timer, 49–50
 slide shows, 151
 Time Zone, 38
 timers, auto off, 39–40
 times
 camera/computer synchronization, 171
 File Information mode, 136
 Time Zone settings, 38
 tonal range, 138–139, 227–229
 topside controls, Nikon D3100, 17–19
 Total Pictures, File Information mode, 135
 transition effects, slide shows, 151–152
 trash can icon, Delete button, 20–21
 Trim function, Retouch menu, 327–328
 tripods
 disabling Vibration Reduction (VR), 13
 scenic vistas, 296
 slow shutter speeds, 88
 tripod socket, 24
 troubleshooting, print jobs, 185–186
 Type C mini-pin HD cable, 23–24

• U •

UC-E4 USB cable, 23–24, 162
 underexposures, exposure meter, 210
 updates, firmware, 3
 USB cable, downloading images, 162–172
 USB port, 23–24, 162, 164

• V •

versions, 3, 42, 167
 Vibration Reduction (VR) control, 12–13, 73
 Video Mode, Setup menu control, 38
 View/Delete menu, category selections, 26

viewfinder

- Auto Off Timers, 39–40
- blinking question mark (?) display, 35
- cover application, 93
- exposure meter, 209–211
- focus points, 13–14, 245
- f-stop display, 212
- ISO value display, 217
- Live View guidelines, 93
- low-battery indicator, 33
- manually focusing, 254–247
- memory card formatting message (For) display, 15
- memory card uninstalled (-E-) symbol, 9
- picture settings display, 32, 33
- shots remaining display, 32, 33, 51
- shutter speed display, 212
- viewfinder adjustment dial, 13–14
- Vista (Service Pack 2), 163–165
- Vivid (VI), Picture Control, 277–278

• W •

- Warm filter, Retouch menu, 316–317
- waterfalls, slow shutter speeds, 296–297
- Web sites
 - Adobe Photoshop, 161
 - Adobe Photoshop Elements, 160
 - Apple Aperture, 161
 - Apple iPhoto, 159
 - Apple Photoshop Lightroom, 161
 - eCheat Sheet, 4
 - eye.fi, 14
 - Huey Pro, 185
 - Mozy, 166

Nikon, 3, 242

Nikon Capture NX 2, 160

operating system compatibility, 163

strobist.com, 51, 242

Sypder3Express, 185

White Balance

- custom presets, 269, 271–274
- direct measurement, 271–272
- Function (Fn) button assignment, 335
- Live View recordings, 111–112
- matching to an existing photo, 273–274
- setting, 266–269
- still portraits, 288
- white balancing, 265–266
- wide angle lenses, 257, 263
- Wide Area Live View, 100, 102
- Windows 7, 163–165, 185
- Windows Explorer, image transfers, 165
- Windows Live Photo Gallery, 159
- Windows PCs, image transfer, 164–165
- Windows Photo Gallery, 159

• X •

XMP/IPTC data, 171, 179

XP (Service Pack 3), image transfer, 163

• Z •

- zoom barrel, 11, 12
- Zoom In button, 20–21, 131–133
- zoom lenses, f-stop range, 199
- Zoom Out button, 20–21, 34–35, 130–131
- zooming in, close-up shots, 299